



# MANUAL C-SHUTTLE 250DB


  
**GREENSPEED™**  
crazy about cleaning

# OVERVIEW






1.1 Place the bars in the base.

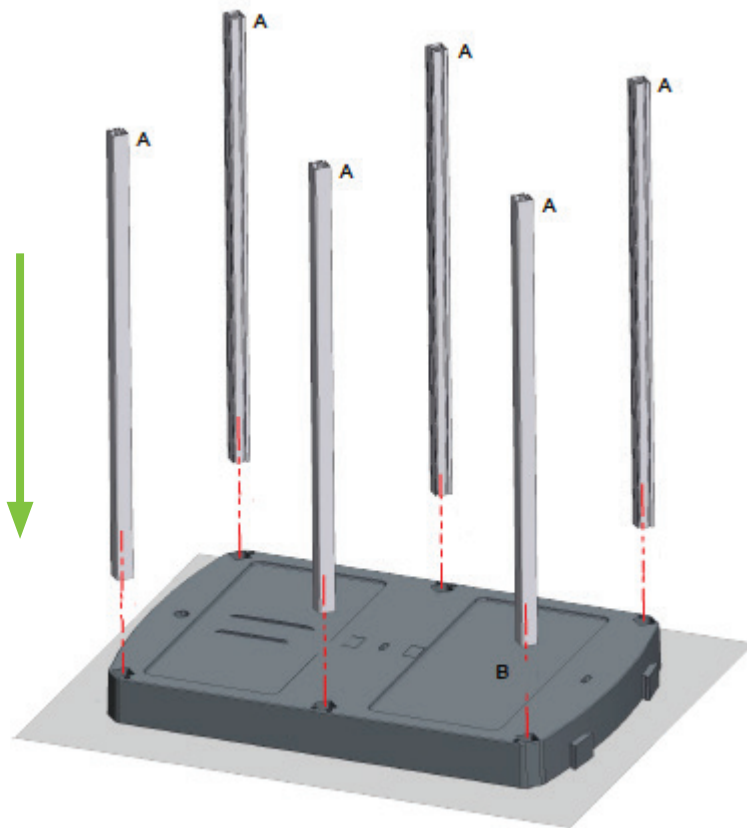**A****B**

- 1.2 Application of two aluminium inserts on the side where aluminium supports are not present. (wringer side)
- 1.3 Application of two closure caps.

**A**



**B**



**1**



**2**



**3**



1.4 Add the large grey parts on the side of the frame and screw.


**A**



**B**



**C**

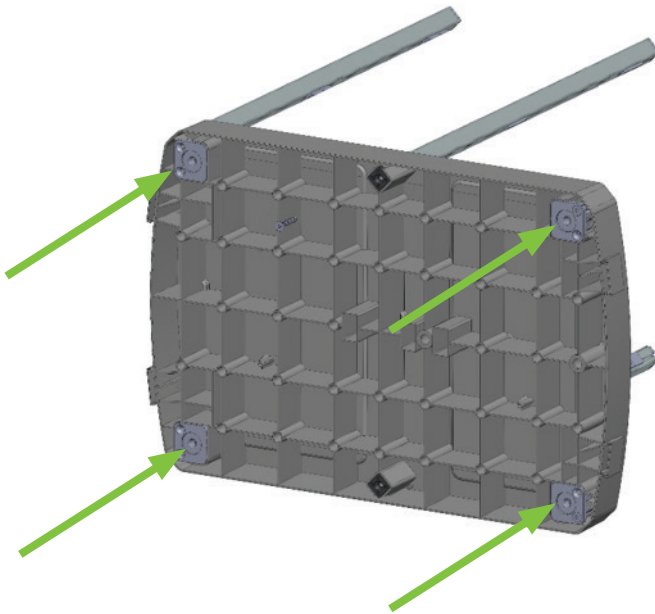

- 1.6 Add the small grey part on the base in the middle and screw the aluminium supports in the middle.


**A**




**B**



**C**

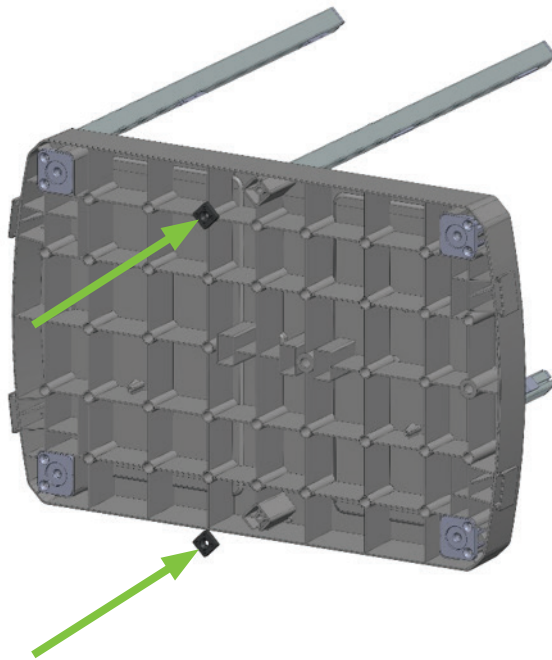

1.7 Wheels with bumper and washers.

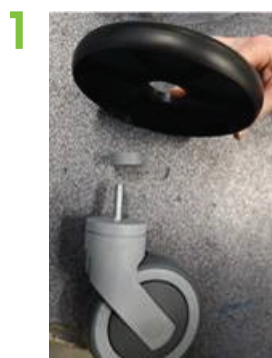






**A**





A

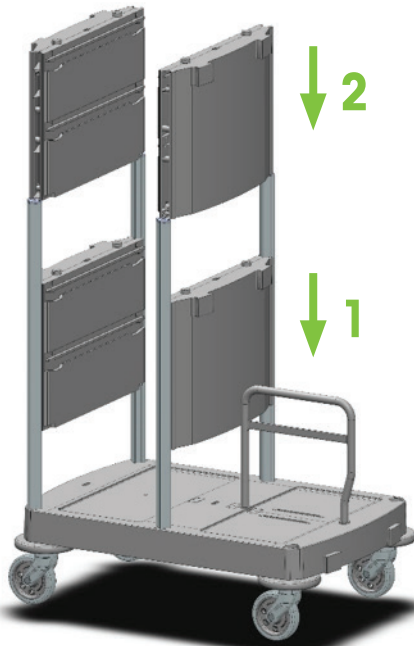

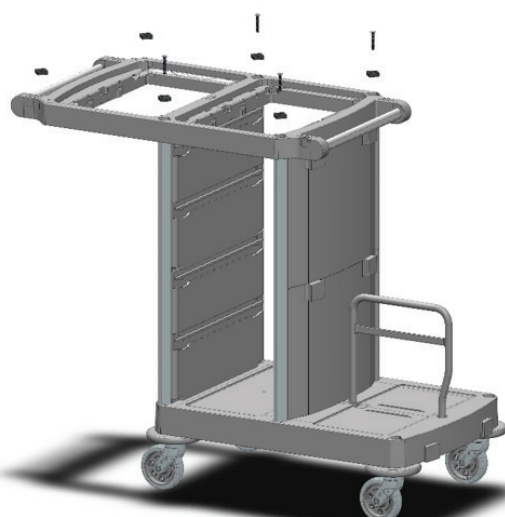
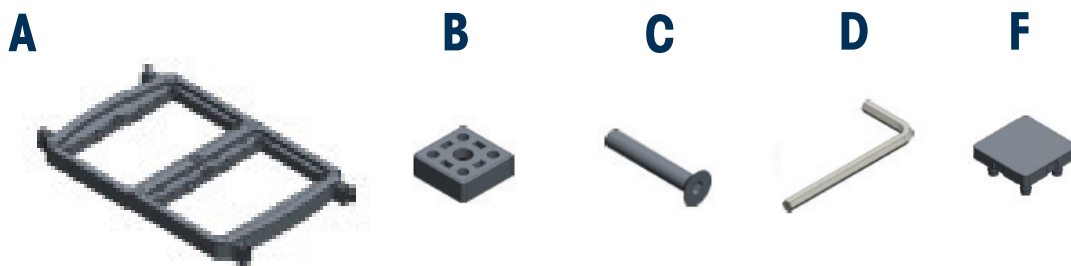








**A**



**B**

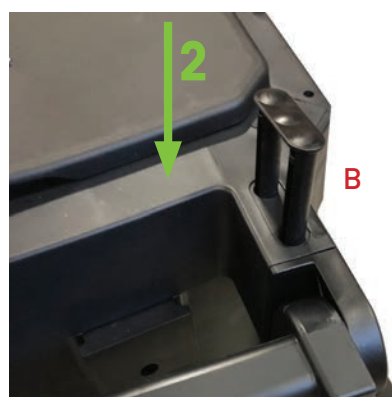
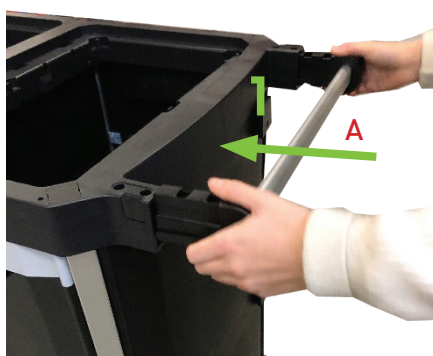




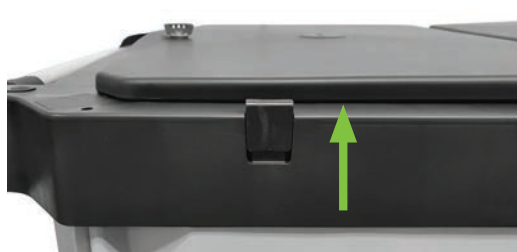
**A****B****1****2****3****4**

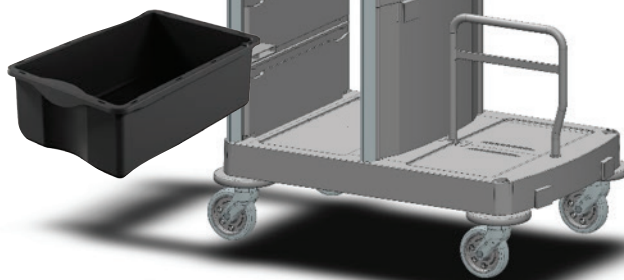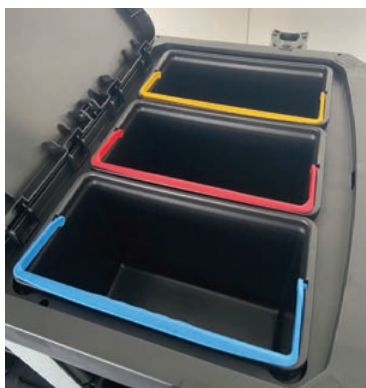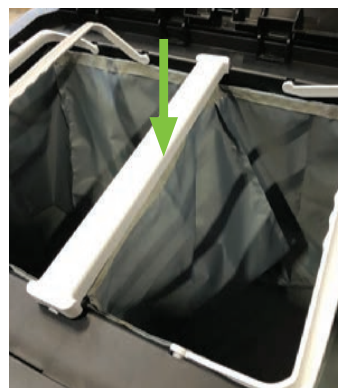**A****B****C****1****2****3**



- 4.1 Align the hinge in the corresponding hole on the base.
- 4.2 Ligh the hinge with the hole under the top.

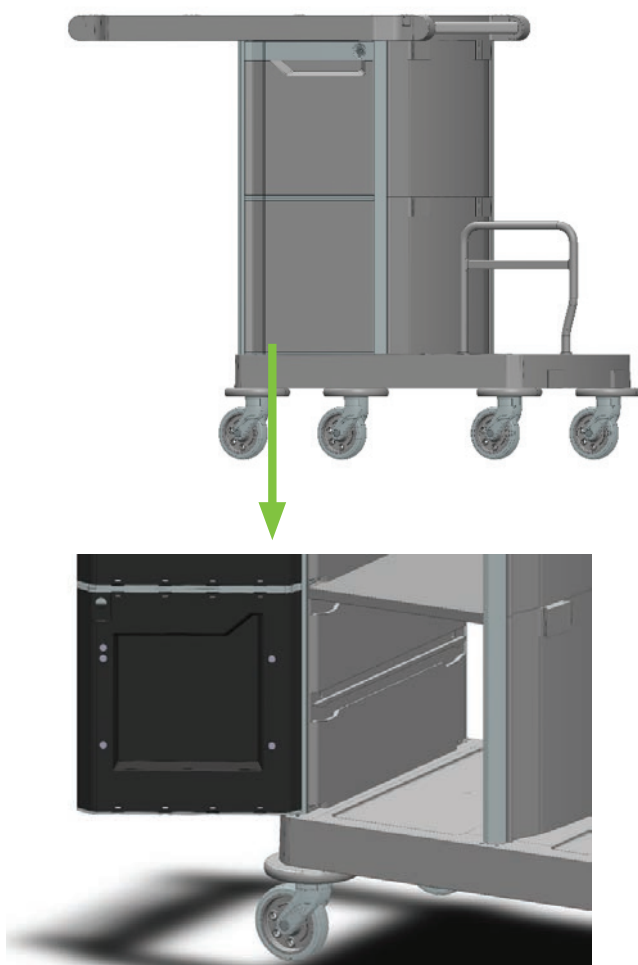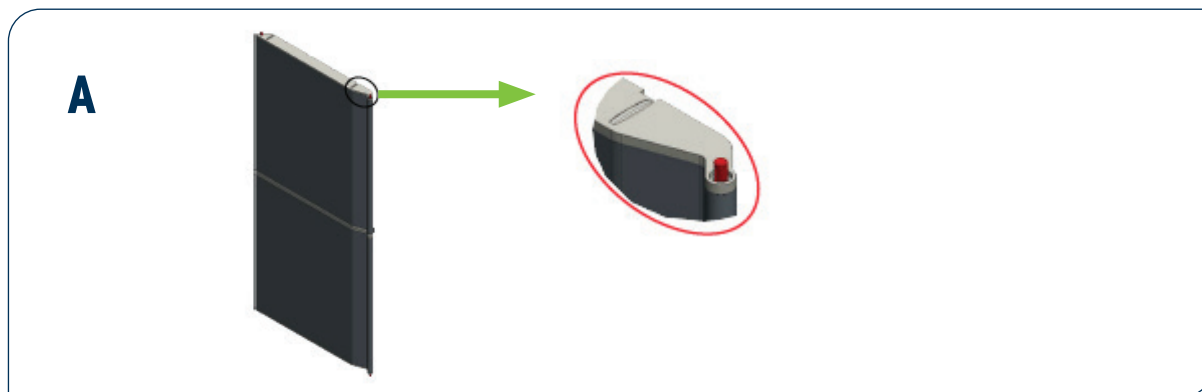

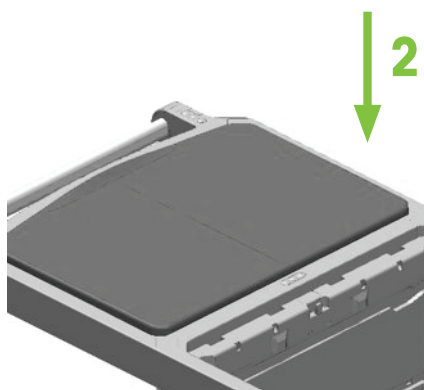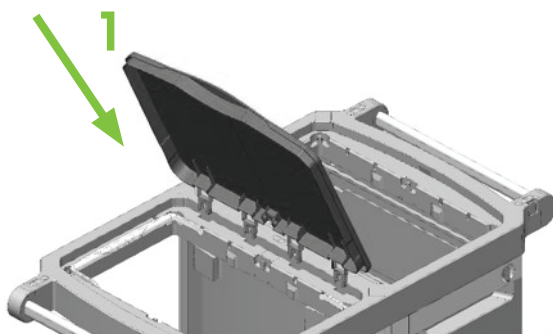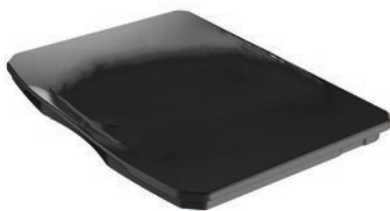**A**








**A**



**B**

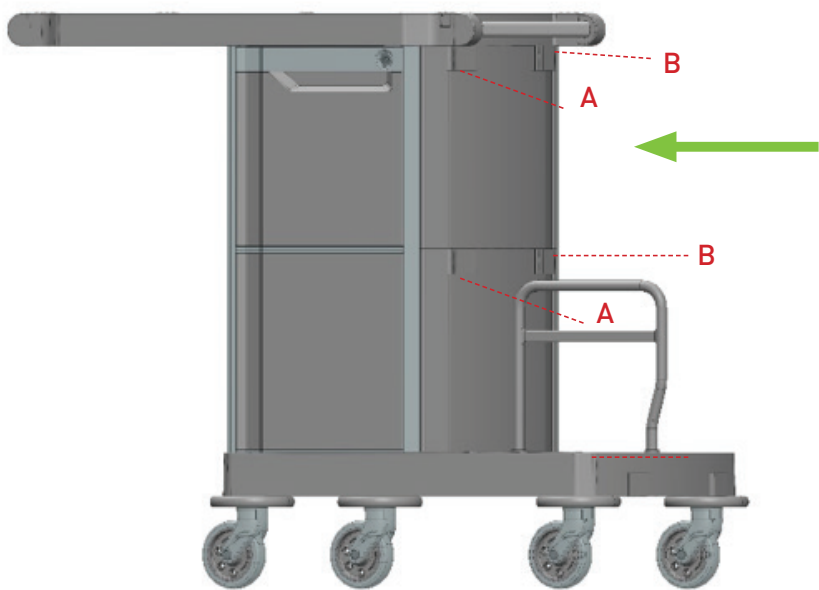

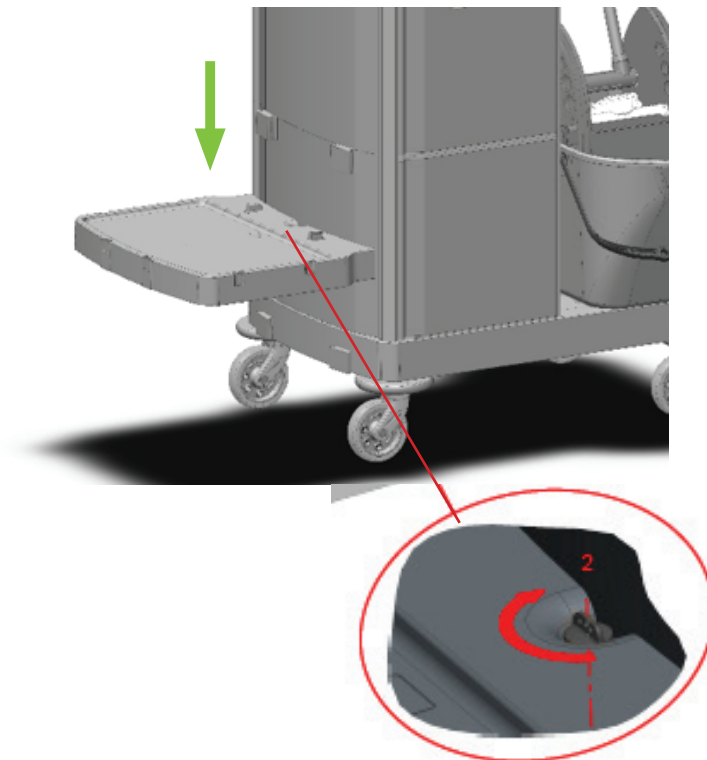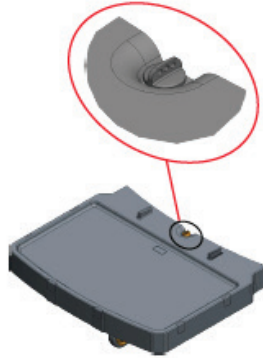**A**

12  
▼


## PLACE BUCKETS AND PRESS



A



B

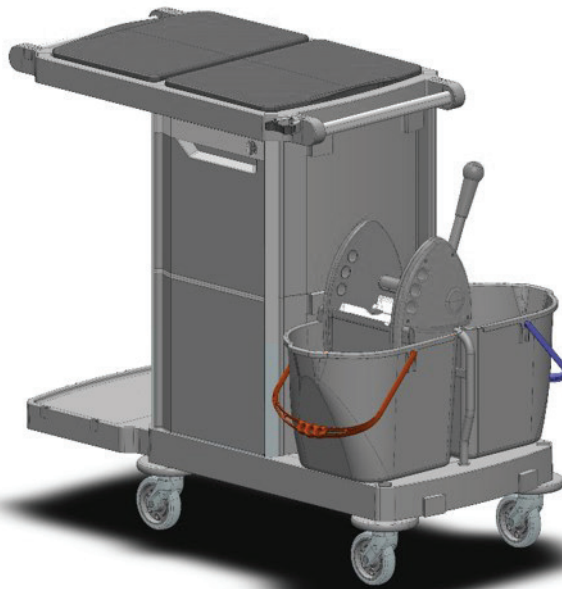

▼ **READY TO ROLL!**



**CONTACT**

T +31 (0)70 345 87 37  
F +31 (0)70 345 89 42  
[greenspeed@greenspeed.eu](mailto:greenspeed@greenspeed.eu)

**HOOFDKANTOOR**

Greenspeed B.V.  
Rotterdam Airportplein 24  
3045 AP Rotterdam  
Nederland

P.O.Box 1250  
2280 CG Rijswijk  
Nederland

[www.greenspeed.eu](http://www.greenspeed.eu)

