




MANUAL C-SHUTTLE 250DB


GREENSPEED™
crazy about cleaning



1.1 Place the bars in the base.

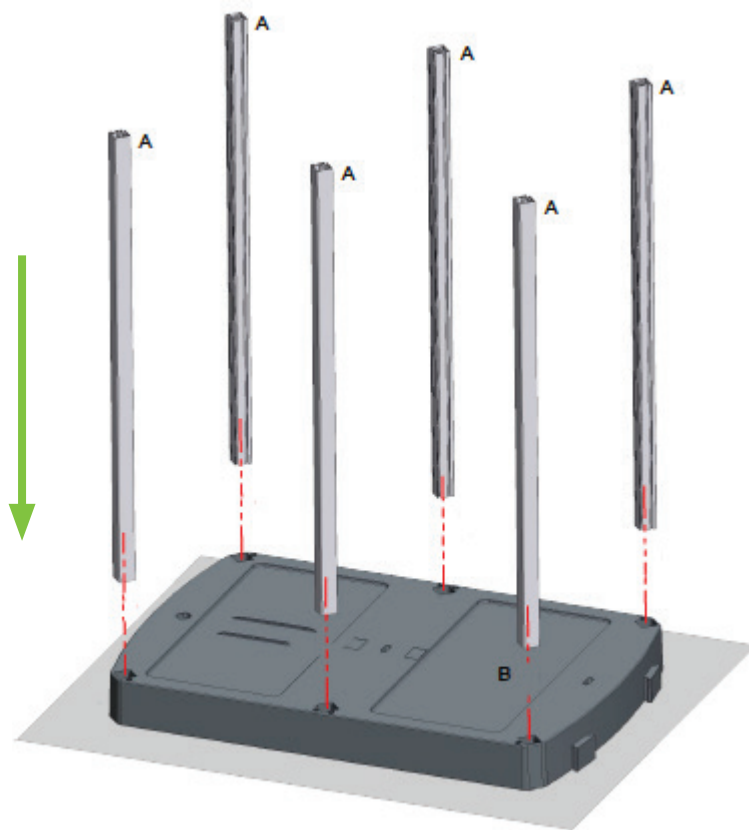A**B**

- 1.2 Application of two aluminium inserts on the side where aluminium supports are not present. (wringer side)
- 1.3 Application of two closure caps.

A



B



1



2



3



1.4 Add the large grey parts on the side of the frame and screw.


A



B



C

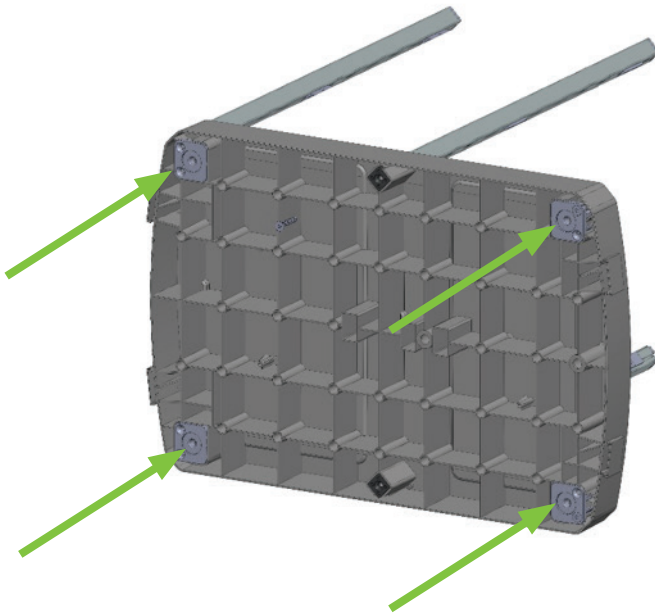

- 1.6 Add the small grey part on the base in the middle and screw the aluminium supports in the middle.


A



B



C

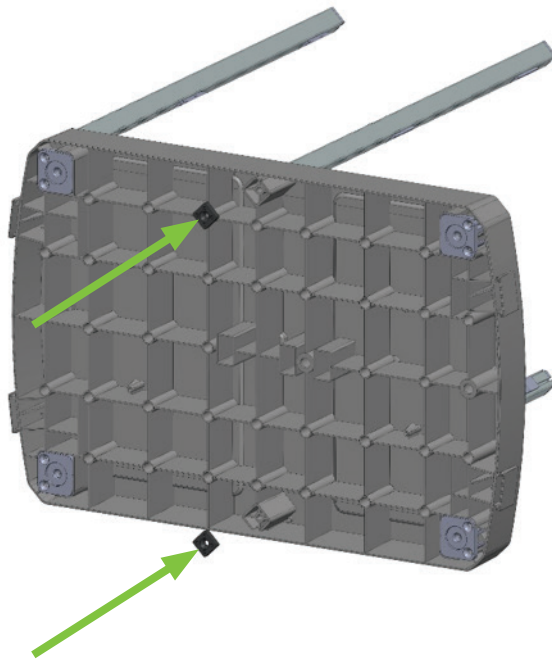

1.7 Wheels with bumper and washers.

A



B



C



D





1



2




3

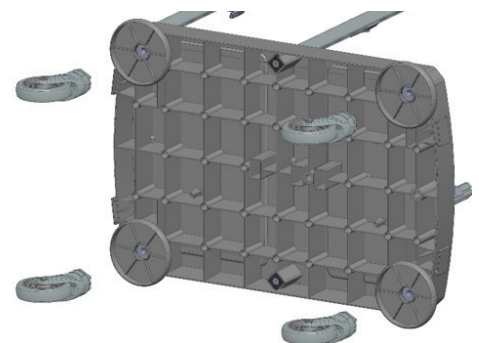
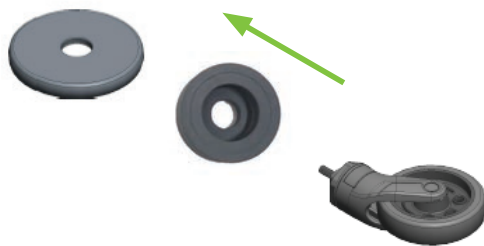


**A**



A

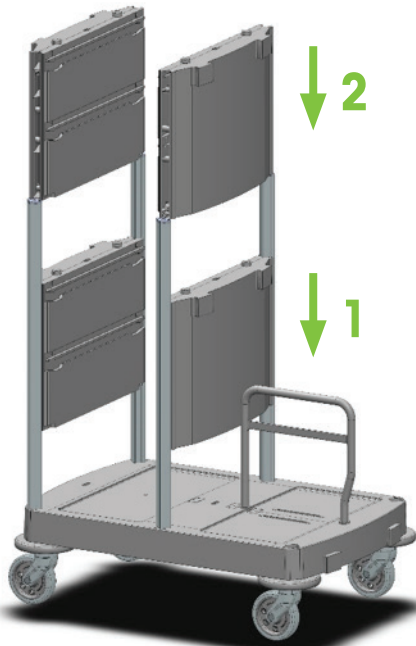

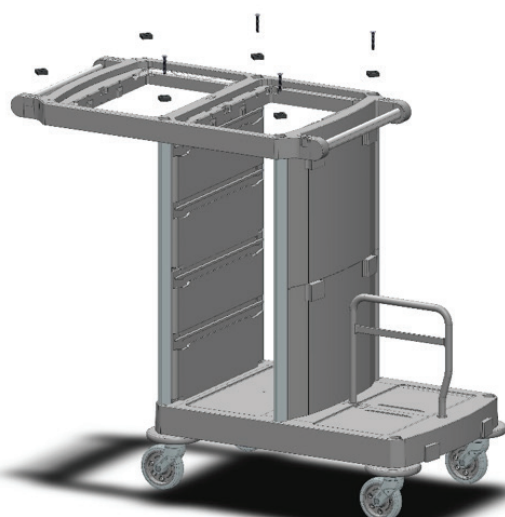
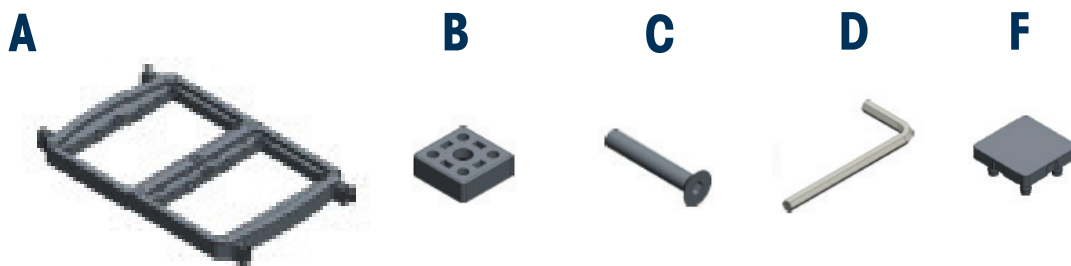







A



B

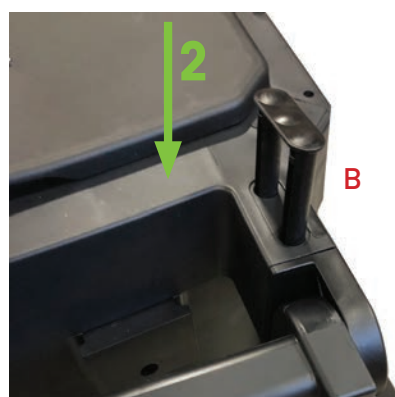
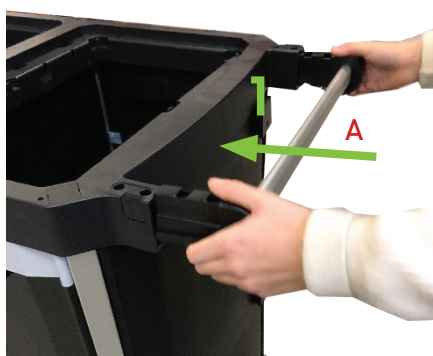




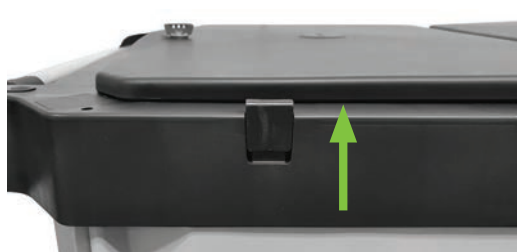
**A****B****1****2****3****4**

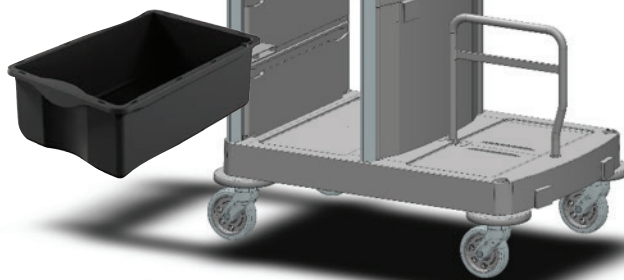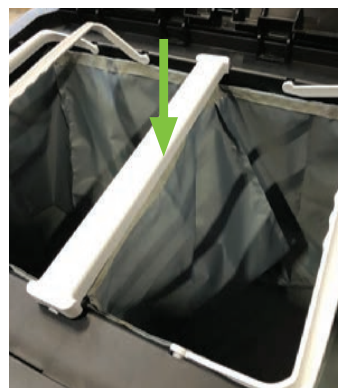**A****B****C****1****2****3**



- 4.1 Align the hinge in the corresponding hole on the base.
- 4.2 Ligh the hinge with the hole under the top.

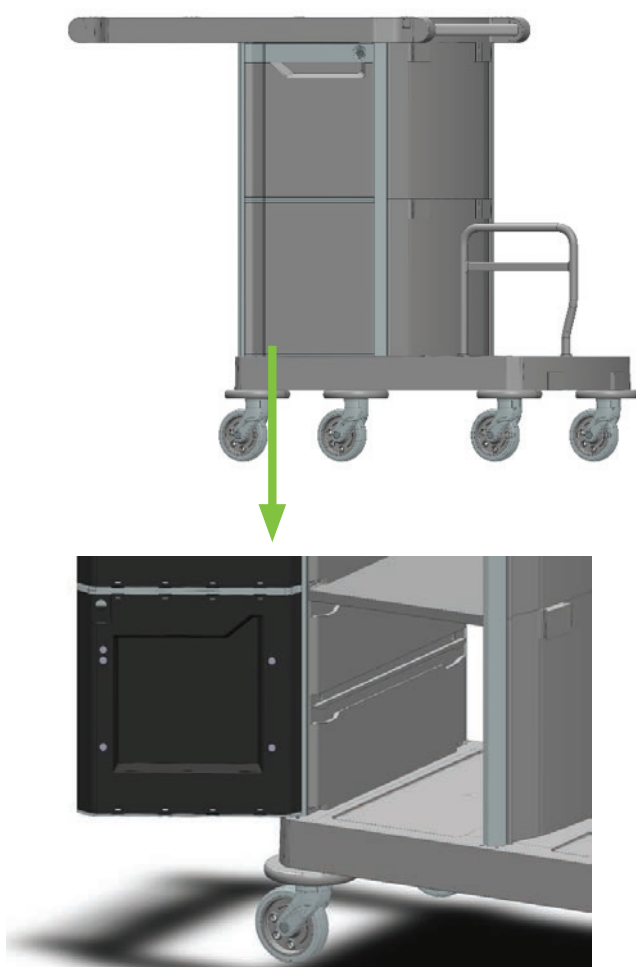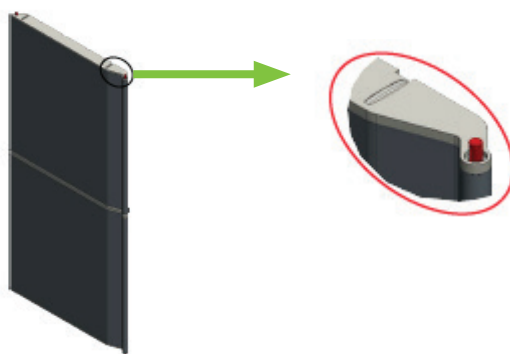A

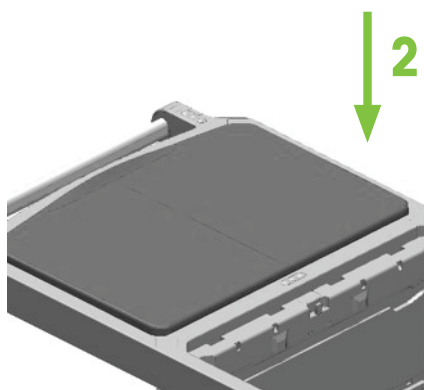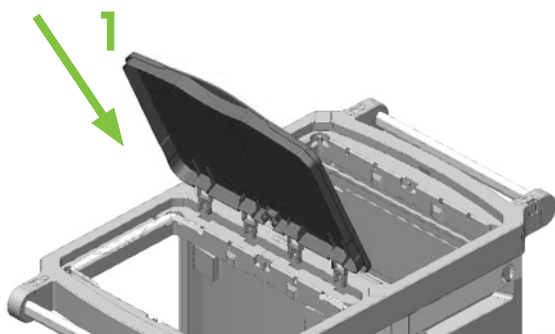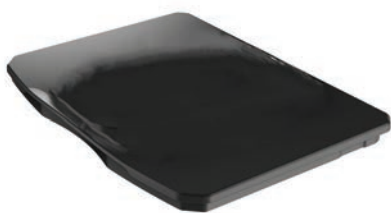
**A**





A



B

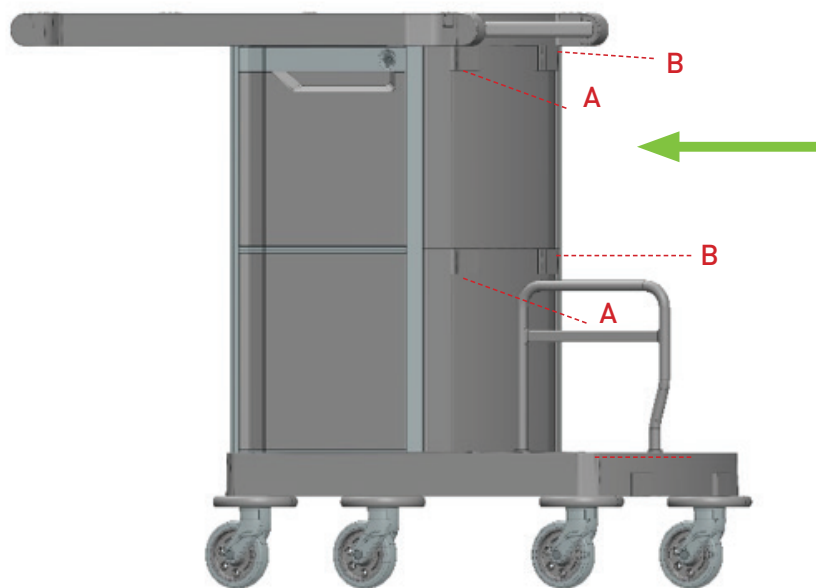

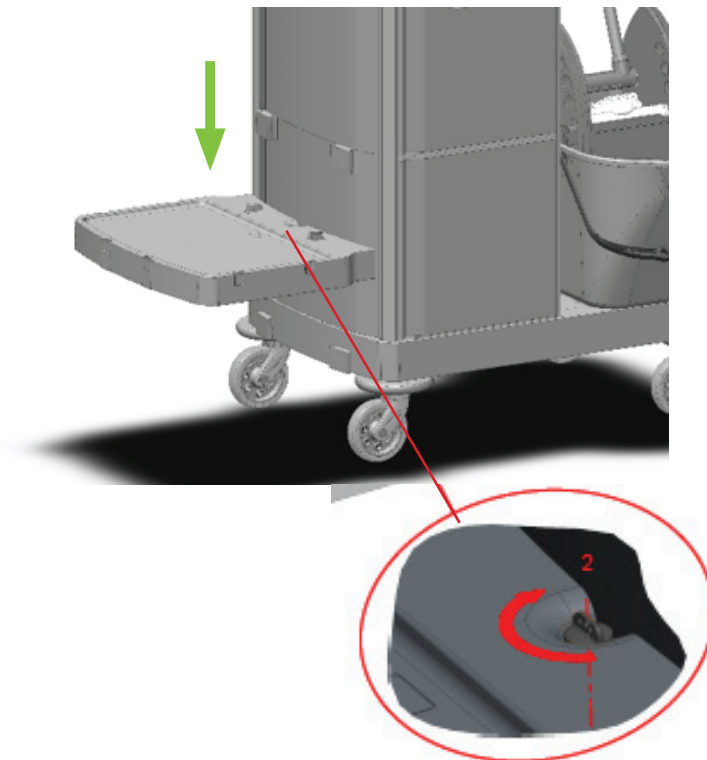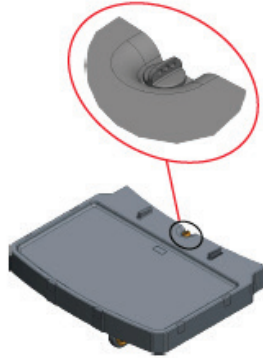**A**

12
▼


PLACE BUCKETS AND PRESS



A



B

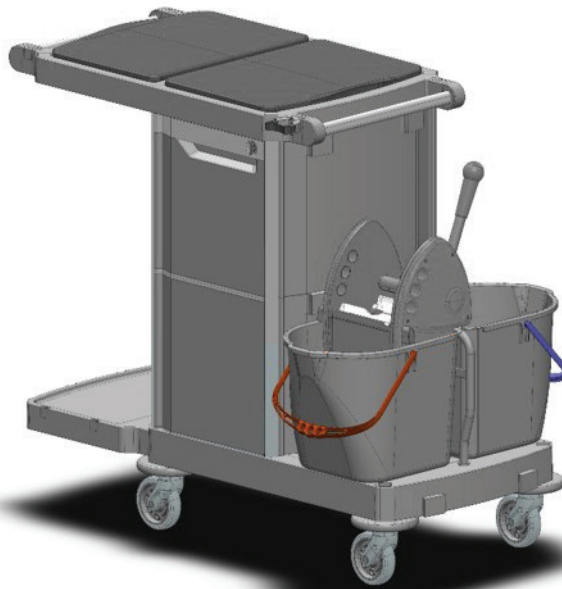

▼ **READY TO ROLL!**



CONTACT

T +31 (0)70 345 87 37
F +31 (0)70 345 89 42
greenspeed@greenspeed.eu

HOOFDKANTOOR

Greenspeed B.V.
Rotterdam Airportplein 24
3045 AP Rotterdam
Nederland

P.O.Box 1250
2280 CG Rijswijk
Nederland

www.greenspeed.eu

