




MANUAL C-SHUTTLE 250DB


GREENSPEED[™]
crazy about cleaning

OVERVIEW

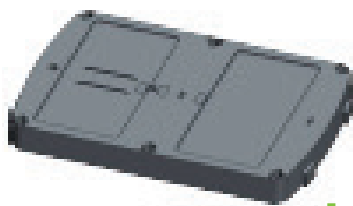

x1



x4



x2

4801055



x2

4801057



x4

4801071



x10



x2



x4

4801059



x4

4801104



x4

4801058



x1

4801074



x4

4801070




right: x1

4801068

back: x1

4801066

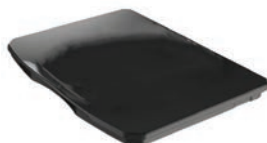

x2

4801063



left: x2

4801086

right: x2

4801085

base: x2

4801087



x1

4801079



x2



x4

4801076



x1



x6



x8

4801061



x2

4801092



red: x1

4801077

blue: x1

4801078

yellow: x1

4801102



blue: x1

4801083

red: x1

4801082



x1

4801081



x1

4801080



x2

4801100



x1

4801084





1

FIXING ALUMINIUM SUPPORTS AND WHEELS TO THE TROLLEY BASE



1.1 Place the bars in the base.

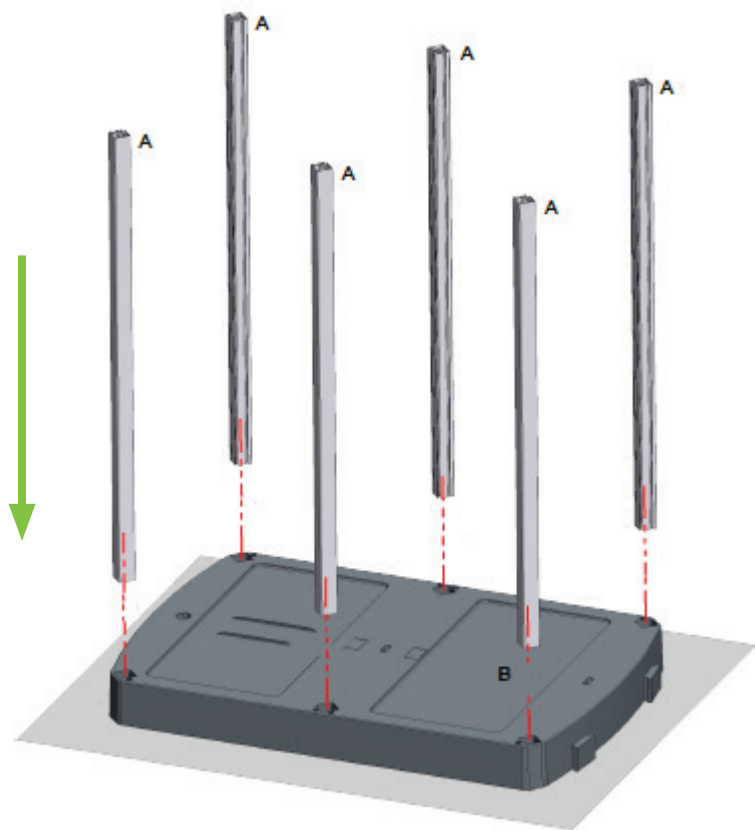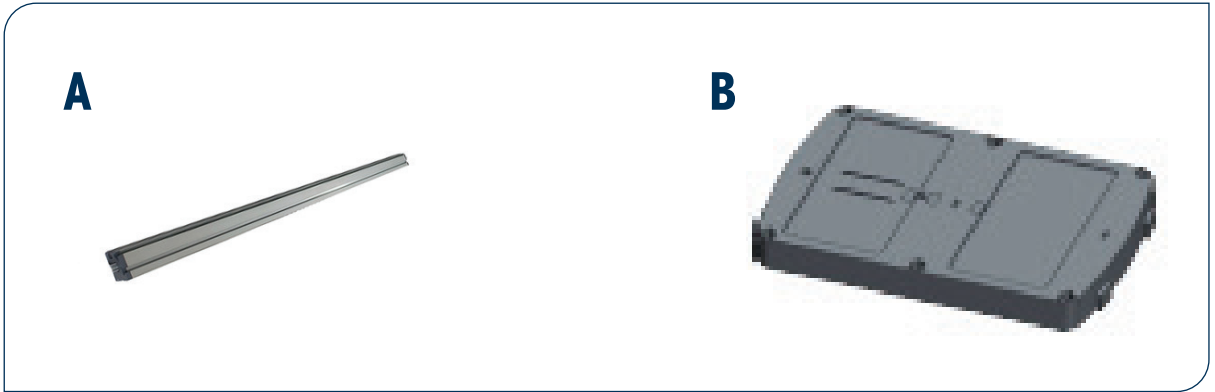

- 1.2 Application of two aluminium inserts on the side where aluminium supports are not present. (wringer side)
- 1.3 Application of two closure caps.

A



B



1



2



3



1.4 Add the large grey parts on the side of the frame and screw.


A



B




C

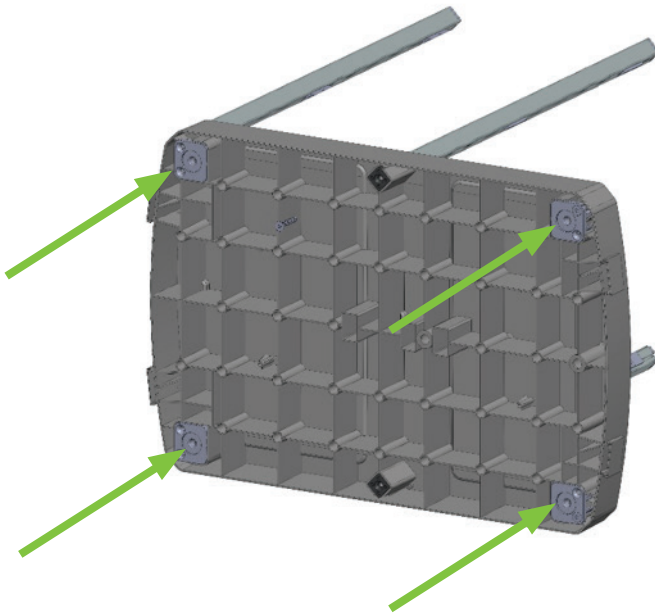

1.6 Add the small grey part on the base in the middle and screw the aluminium supports in the middle.


A





B



C

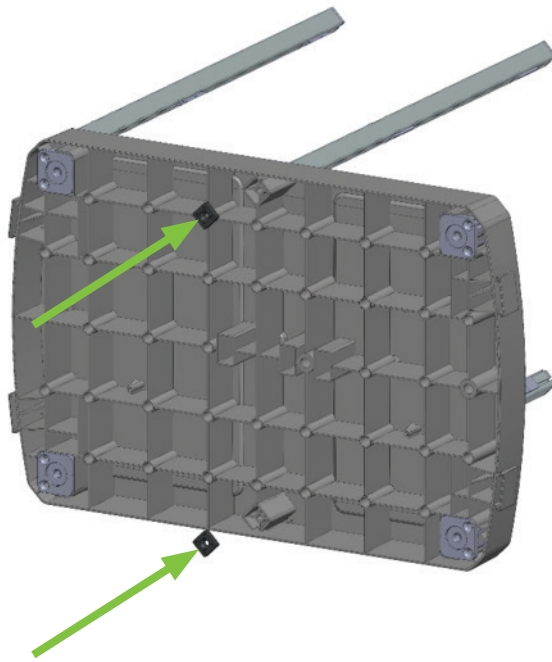

1.7 Wheels with bumper and washers.

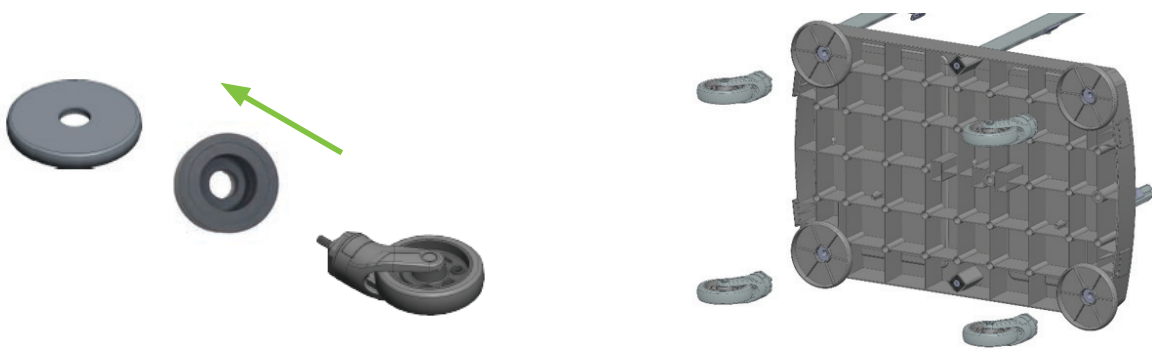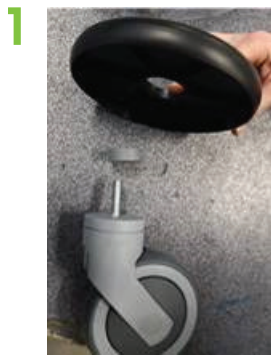




2

INSERT OF METAL SUPPORT




3

INSTALLATION OF CABINET'S PANELS

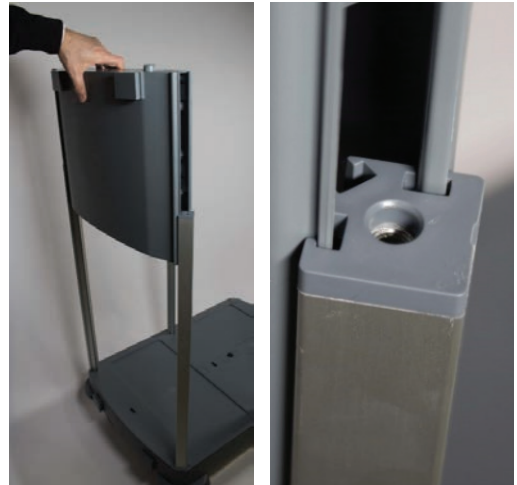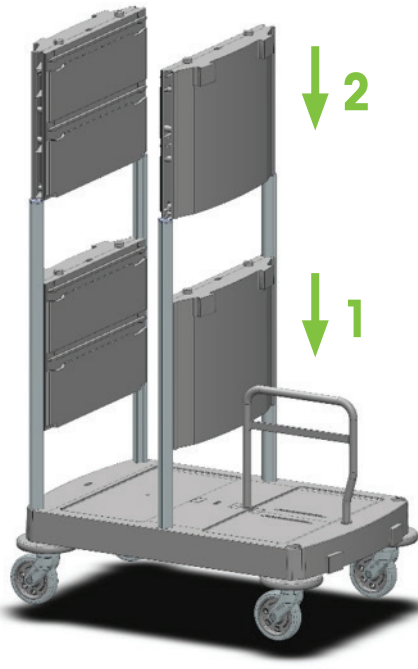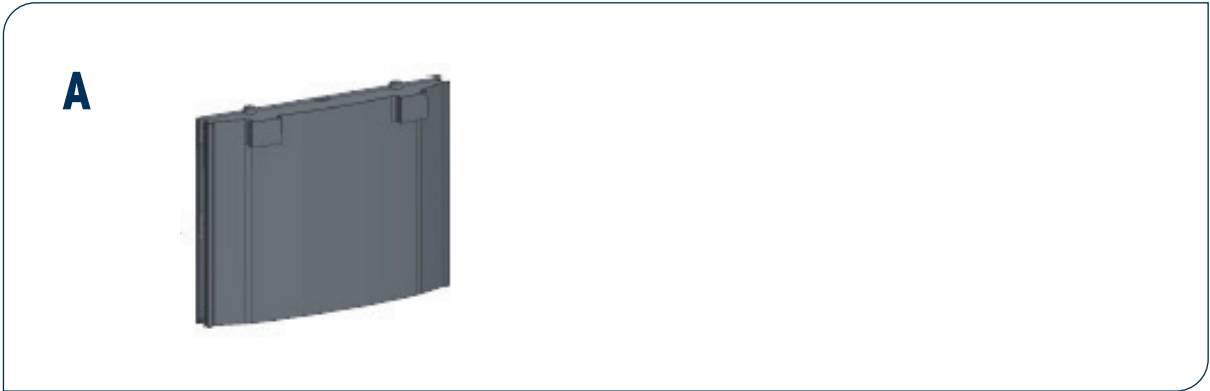




4

FIXING CABINET'S TOP

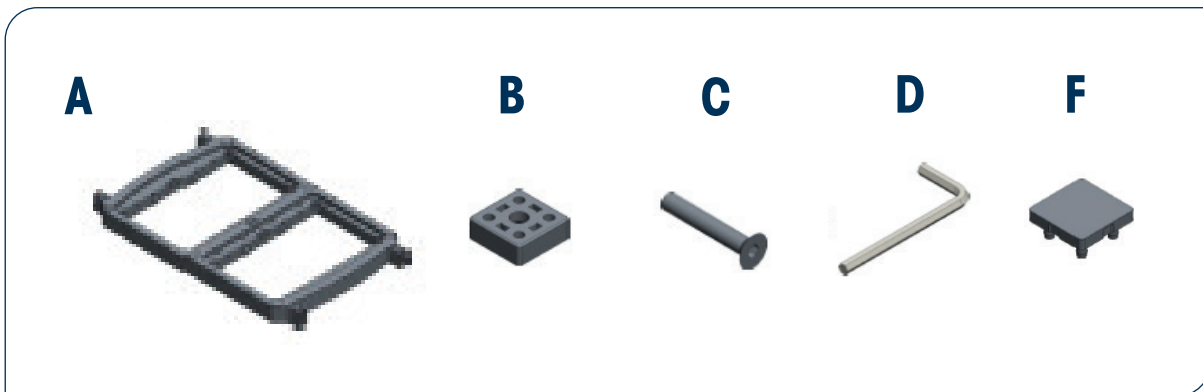

5

INSTALLATION OF ALUMINIUM HANDLE (X2)

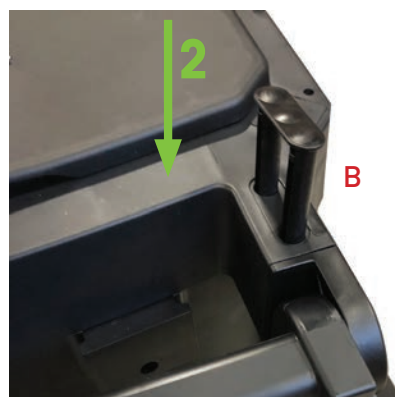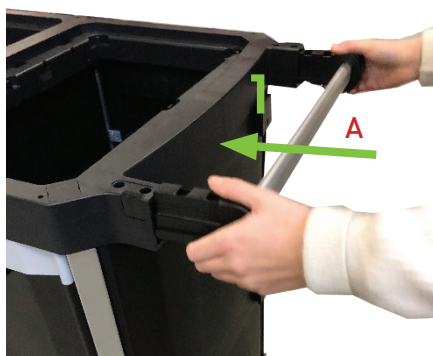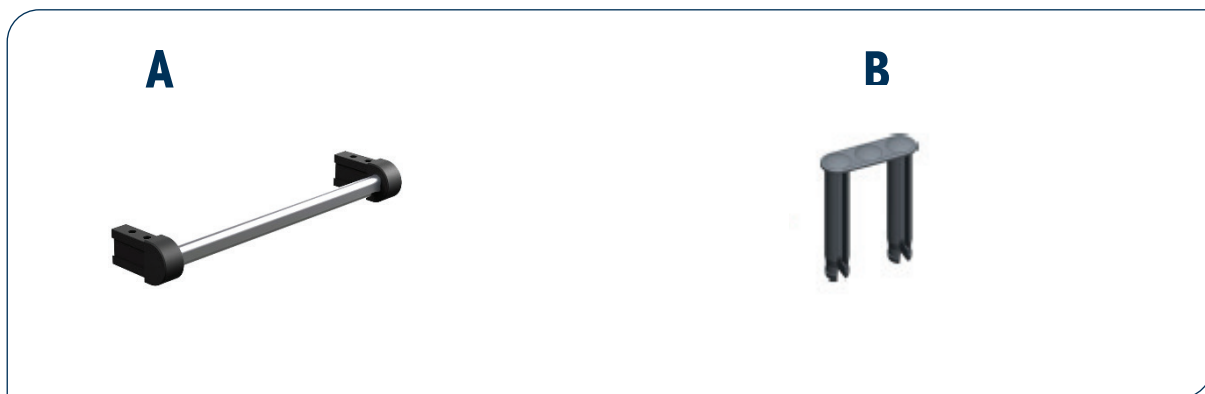

6

PLACE HANDLE HOLDERS (X2) & HOOK



A




B



1



2

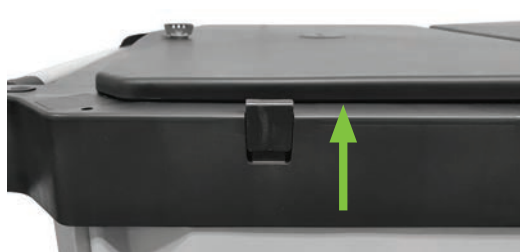

3





4



7




INSERT OF DRAWER, BUCKETS AND BAG DIVIDER

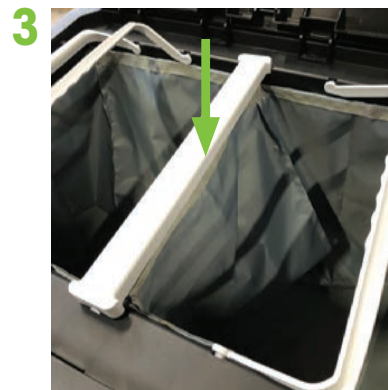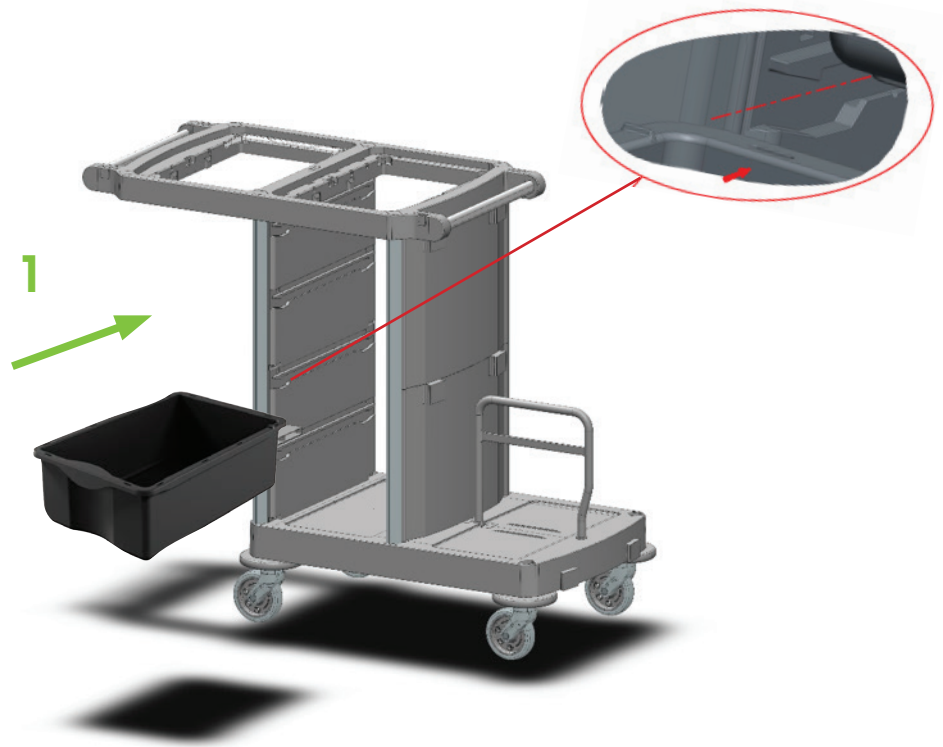

8

INSTALLATION OF CABINET'S BACK PANEL & DOOR

- 4.1 Align the hinge in the corresponding hole on the base.
- 4.2 Ligh the hinge with the hole under the top.

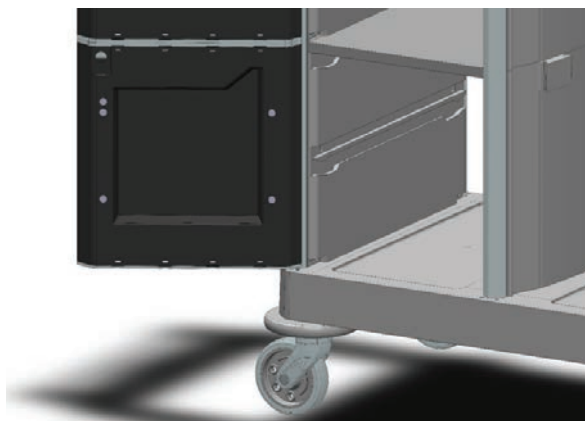
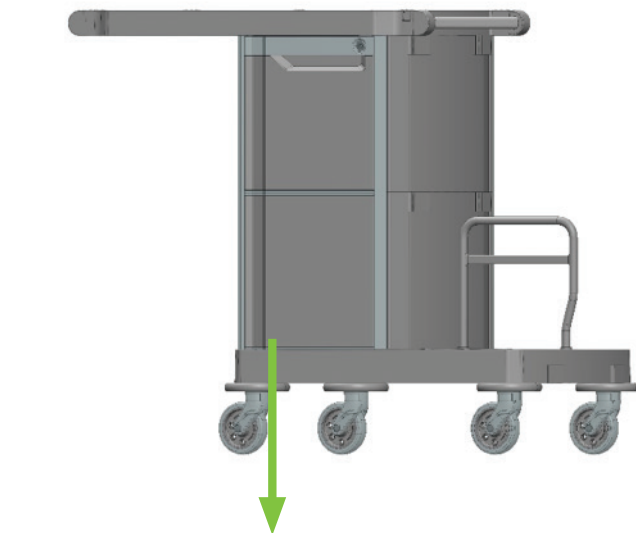
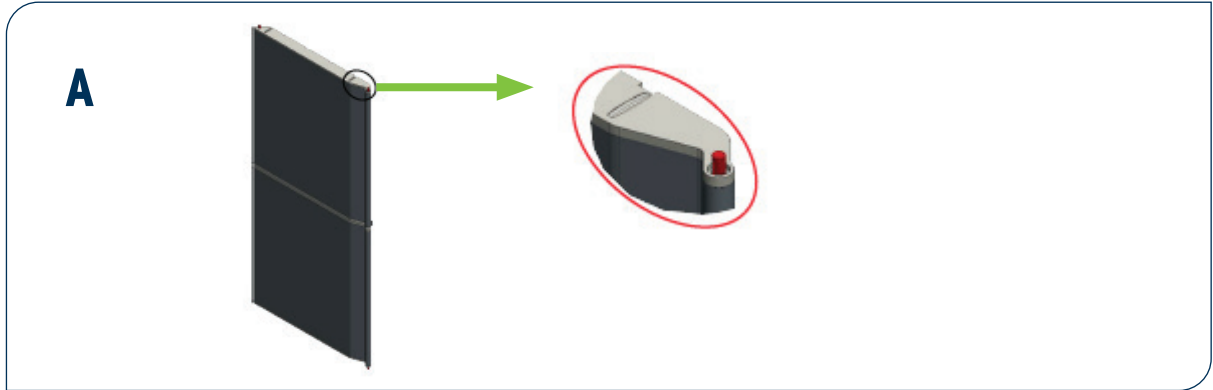


9

LID INSTALATION (X2)






A

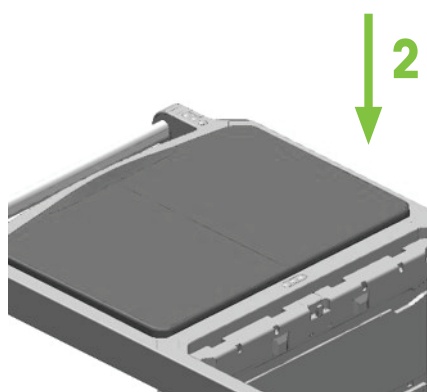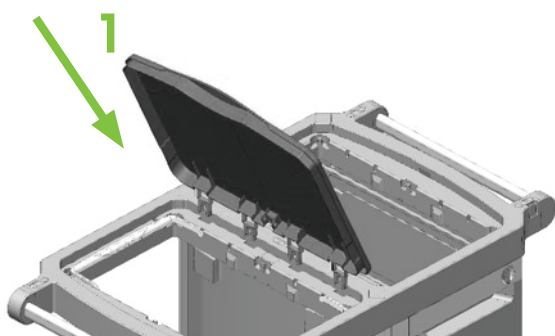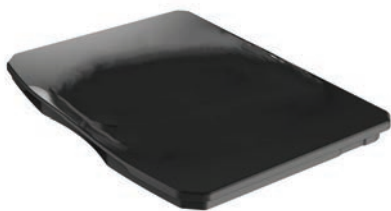

10
▼

PLACE DOVETAILS (X2)

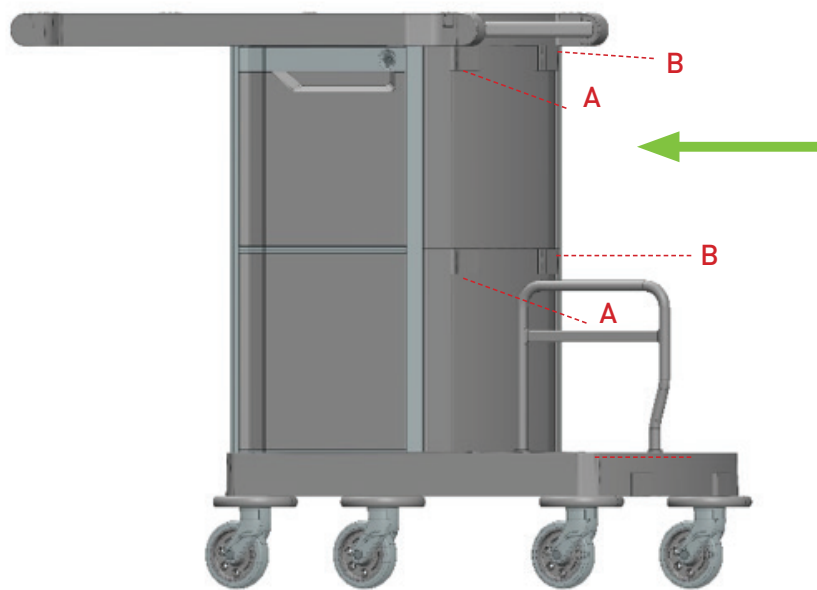

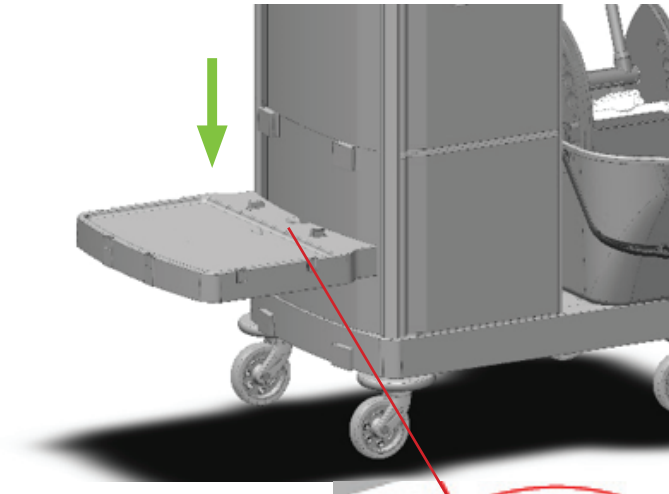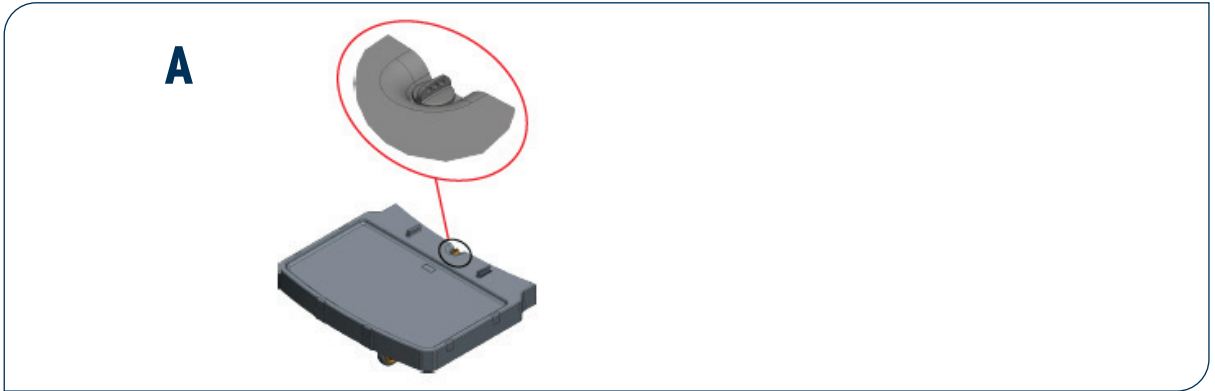

12
▼


PLACE BUCKETS AND PRESS



A



B

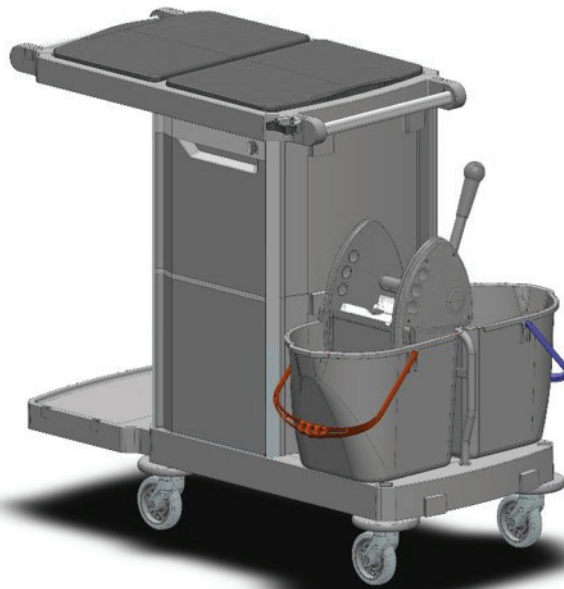

▼ **READY TO ROLL!**



CONTACT

T +31 (0)70 345 87 37
F +31 (0)70 345 89 42
greenspeed@greenspeed.eu

HOOFDKANTOOR

Greenspeed B.V.
Rotterdam Airportplein 24
3045 AP Rotterdam
Nederland

P.O.Box 1250
2280 CG Rijswijk
Nederland

www.greenspeed.eu

