



MANUAL C-SHUTTLE 200DB


GREENSPEEDTM
crazy about cleaning




OVERVIEW



FIXING ALUMINIUM SUPPORTS AND WHEELS TO THE TROLLEY BASE



- 1.1 Place the bars in the base.
- 1.2 Place the tray holders on the aluminium bars.
- 1.3 Check the correct alignment.

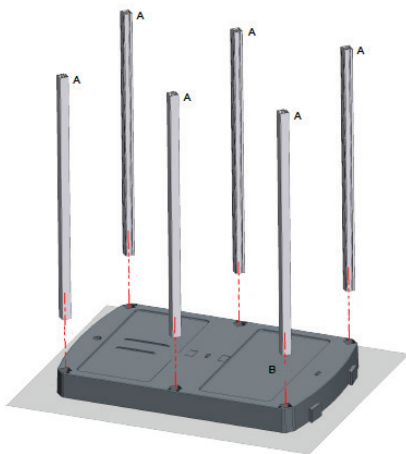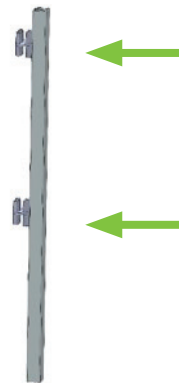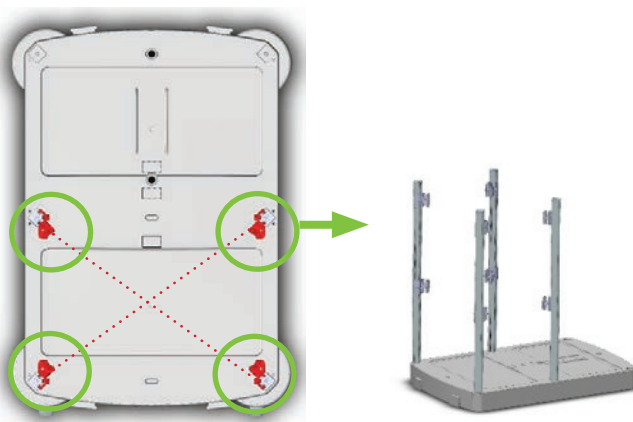A**B****C****1****2****3**

- 1.4 Application of two aluminium inserts on the side where alluminium supports are not present. (wringer side)
- 1.5 Application of two closure caps.

A



B



1



2



3



1.6 Add the large grey parts on the side of the frame and screw.


A



B



C

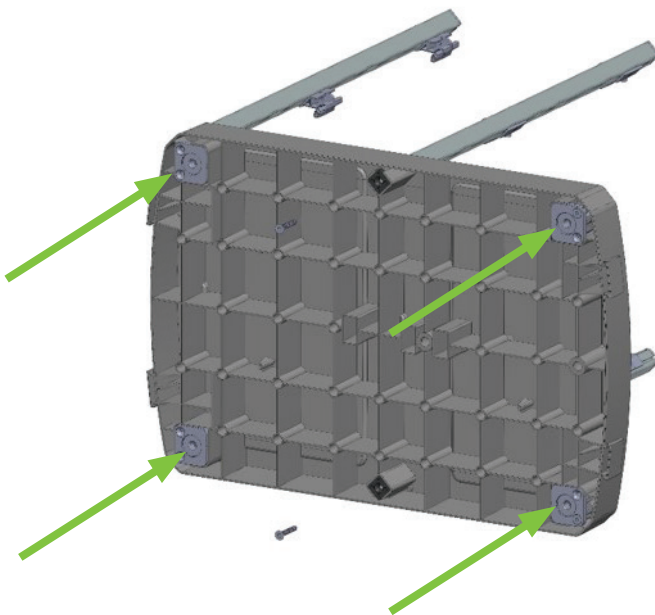

- 1.7 Add the small grey part on the base in the middle and screw the aluminium supports in the middle.


A



B



C

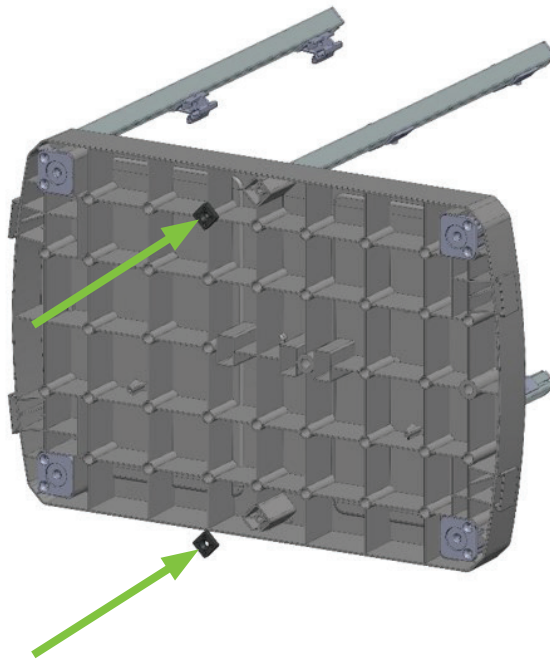

1.8 Wheels with bumper and washers.

A



B



C



D





1



2




3

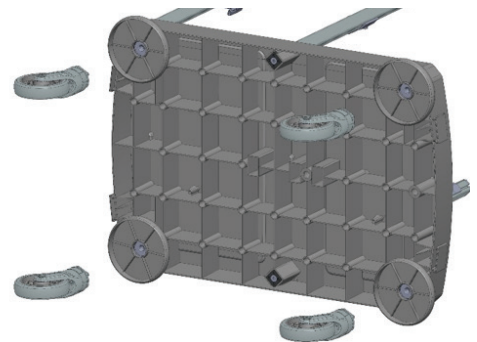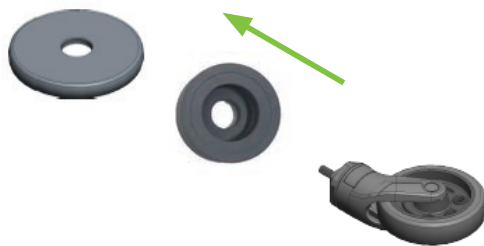




A

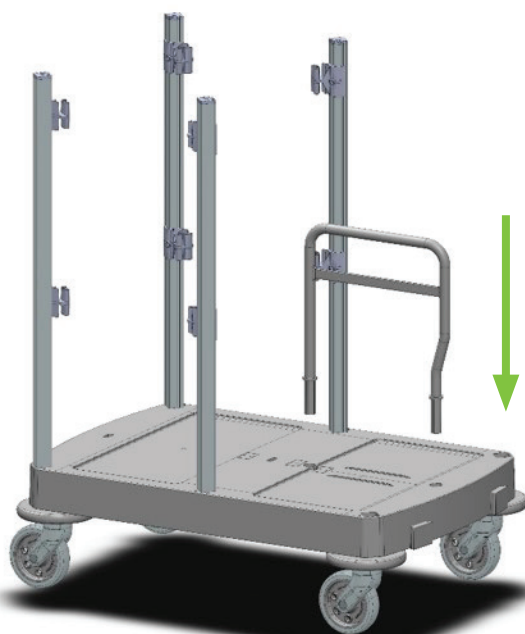



A

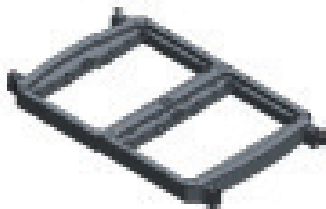

B



C




D




F





1


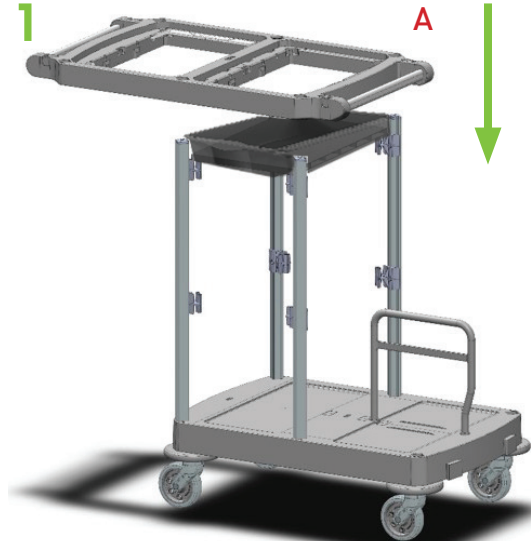


2

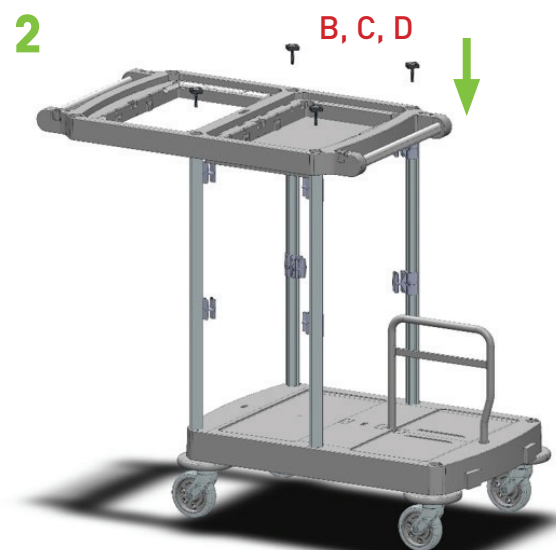


3

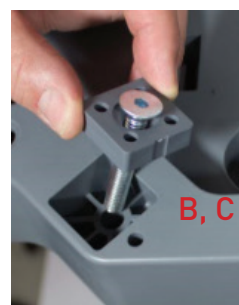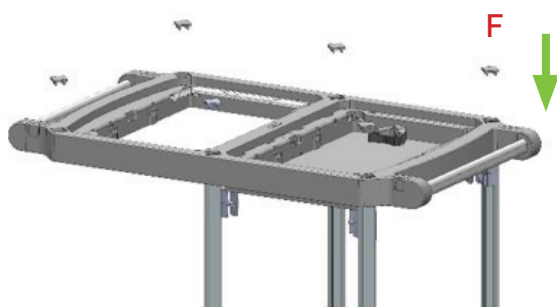

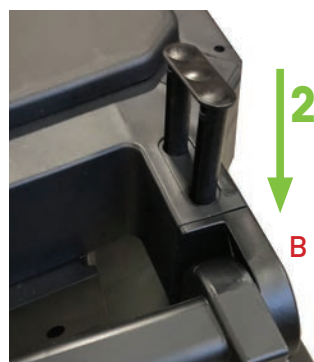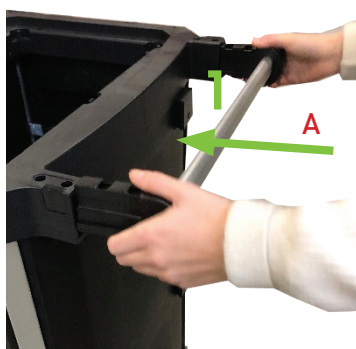**A****B**

**A****B****1****2****3****4**

**A**

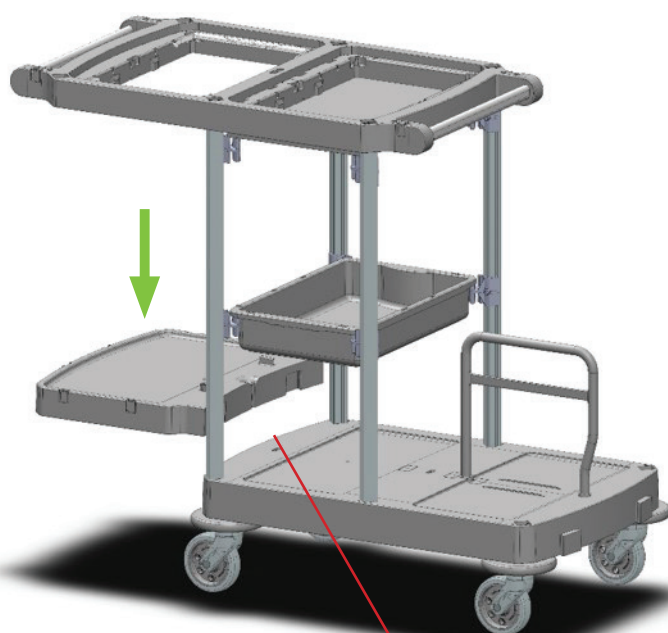**A**



A



B



**A****B**

▼ **READY TO ROLL!**



CONTACT

T +31 (0)70 345 87 37
F +31 (0)70 345 89 42
greenspeed@greenspeed.eu

HOOFDKANTOOR

Greenspeed B.V.
Rotterdam Airportplein 24
3045 AP Rotterdam
Nederland

P.O.Box 1250
2280 CG Rijswijk
Nederland

www.greenspeed.eu

